



Bath Cabinet Installation Instructions

Tools Recommended for Installation:

- Variable Speed Drill and Drill Bits
- Screwdrivers (Phillips & Flat Head)
- Level
- Tape Measure
- Stud Finder
- Hardware to Secure to Wall
- Hammer (Recess Mounted)
- Circular Saw (Recess Mounted)
- Nails (Recess Mounted)

Read instructions completely before beginning installation. Hanging Hardware Not Included. Certain cabinet models can be recess or surface mounted. Please follow instructions that pertain to your specific model.

Recess Mounted Bath Cabinet Installation Instructions

Step 1:

Turn off the electricity in the area in which you are working. Find the first stud beyond either side of the intended cabinet location. The patching work is simplified if the wall surface is removed all the way to the ceiling. Cut along the center of the studs using a circular saw. Use a saw that is set to cut at the depth equal to the thickness of the wall surface.

Step 2:





Mark an opening that is 1/2" taller than the cabinet frame on the studs in the exposed wall. Add 1 1/2" for a sill and header plate to frame the opening. Cut out the studs in the marked opening area. Add a header and a sill plate between the cut wall studs to frame out the top and bottom of the opening.

Step 3:

Secure the header and sill plate with common nail, after making sure that they are level. Mark the opening width of the medicine cabinet on the header and sill plate. Cut two jack studs at the length of the distance between the header and sill plate to complete the frame. Nail the jack studs to the header and the sill plate just outside of the medicine cabinet opening marks.

Step 4:

Install wiring for any light fixtures and then install the new wall surface. Place the cabinet in the opening. Secure the cabinet to the wall with wood screws through the sides of the cabinet into the surrounding frame. Make sure that the cabinet is level before securing with wood screws. Fasten the doors, shelves, and hardware to the medicine cabinet.

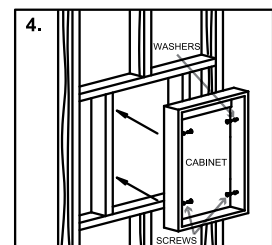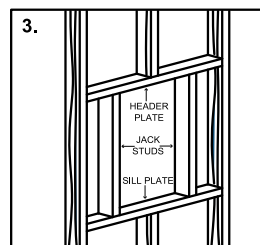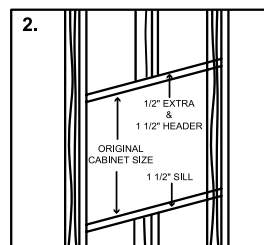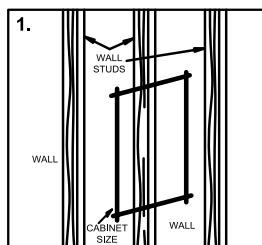

Instrucciones de instalación del botiquín

Herramientas recomendadas para la instalación:

- Taladro de velocidad variable y brocas para taladro
- Destornilladores (Phillips y cabeza plana)
- Nivel
- Cinta métrica
- Detector de vigas
- Herraje para fijarlo a la pared
- Martillo (para montaje empotrado)
- Sierra circular (para montaje empotrado)
- Clavos (para montaje empotrado)

Lea completamente las instrucciones antes de iniciar la instalación. No se incluyen los herrajes de instalación. Ciertos modelos de botiquín se pueden empotrar o de montaje superficial en la pared. Siga las instrucciones pertinentes a su modelo específico.

Instrucciones de instalación del botiquín empotrado

Paso 1:

Desconecte la alimentación eléctrica en el área donde esta trabajando. Localice el primer montante en cualquiera de los lados de la ubicación prevista del botiquín. El trabajo de reparación se simplificará si se retira la superficie de pared completamente hasta el cielorraso. Corte a lo largo del centro de los montantes usando una sierra circular. Ajuste el corte de la sierra a una profundidad equivalente a la de la superficie de la pared.

Paso 2:

Marque una abertura que sea 1/2 in (1.27 cm) más alta que el marco del botiquín en los montantes de la pared expuesta. Añada 1 1/2 in (3.81 cm) para una placa de umbral y una placa de cabecero para enmarcar la abertura. Corte los montantes en el área marcada de la abertura. Coloque una placa de cabecero y una placa de umbral entre los montantes cortados de la pared para enmarcar la parte superior e inferior de la abertura.

Paso 3:

Fije las placas de cabecero y de umbral con clavos comunes, después de verificar que estén nivelados. Marque el ancho de la abertura para el botiquín en las placas de cabecero y de umbral. Corte dos montantes de refuerzo de una longitud de la distancia entre las placas de cabecero y de umbral para completar el marco. Clave los montantes de refuerzo en las placas de cabecero y de umbral justo afuera de las marcas de la abertura del botiquín.

Paso 4:

Instale el cableado para cualquier tipo de iluminación y después instale la nueva superficie de la pared. Coloque el botiquín en la abertura. Fije el botiquín a la pared con tornillos para madera a través de los lados del botiquín hasta penetrar en el marco circundante. Asegúrese de que el botiquín esté nivelado antes de fijarlo con los tornillos para madera. Sujete las puertas, los estantes y los herrajes al botiquín.